



# Merrychef Oven Programming Guide

How to transfer program file from email attachment to Eikon E4 oven



Copy .cbr program file from email attachment to the Merrychef USB flash drive Merrychef



**Press  
&Go**

easy  
**TOUCH**



Touch to Select Options



PASSWORD: 1 - 20 (CHARS)



Use pen tip to type MANAGER







PASSWORD: 1 - 20 (CHARS)

MANAGER



Touch the check mark to enter

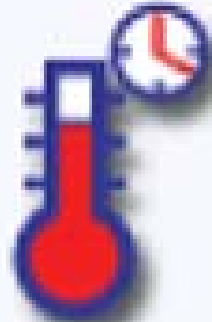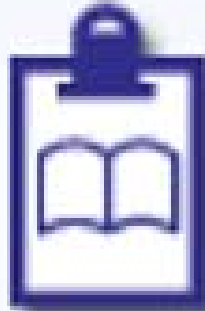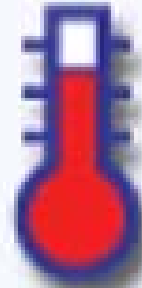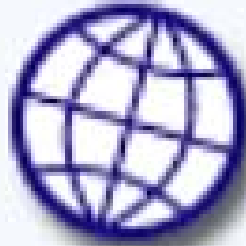

Touch USB icon to select



Slide Merrychef  
logo plate to reveal  
USB socket





Insert Merrychef  
USB Key into  
socket on oven  
face





FIRMWARE



RECIPES

Touch RECIPES icon to select



COPY TO USB



Sodexo Zest 1-10-2010....

8/18/2011 7:18 PM


CBR File

2,393 KB



Select Recipe~..cbr  
file



 COPY RECIPE TO OVEN

Touch check mark  
to download  
program file to  
oven

